

Weather Whipper Solid Top DoorHoods

Selecting and Measuring for a Doorhood Awning


Step One Choose Door Size: Determine the size of the door; standard doors measure: 30", 32" or 36"

Step Two Select Clearance: Measure the clearance above the door. Clearance is the distance above the door to an overhang.


Step Three Determine Projection: Projection is the distance from the house to end of the awning. Keep enough clearance for the door to open and be sure to include anything you want covered, such as stoop.

Point Drop: Point Drop is the measurement from the top of the wall height to the bottom tip of the nose of the awning.


Step One	Step Two	Step Three			
Door Size	Minimum Clearance Above the Door	Projection	Point Drop	Wall Height	Awning
30"	5 1/2"	39 1/2"	11 3/8"	20 1/4"	FL44
	5 1/2"	43"	12"	22 1/2"	FL48
	9 1/4"	39 3/4"	16"	19 3/4"	FC44
	9 1/4"	43 3/4"	16 3/4"	22 1/4"	FC48
32"	5 3/4"	43"	12"	22 1/2"	FL48
	10 1/4"	39 3/4"	16"	19 3/4"	FC44
	10 1/4"	43 3/4"	16 3/4"	22 1/4"	FC48
36"	6"	43"	12"	22 1/2"	FL48
	12 1/4"	39 3/4"	16"	19 3/4"	FC44
	12 1/4"	43 3/4"	16 3/4"	22 1/4"	FC48

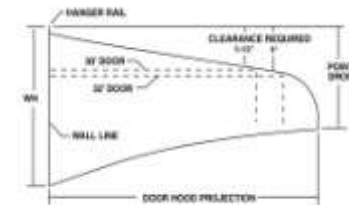

FL44

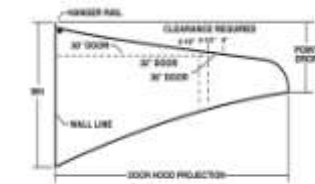

FL48

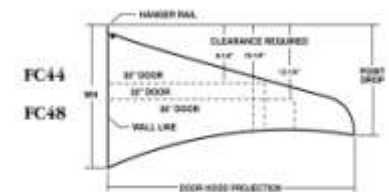

FC44

FC48